



NESiGate-HG

NetEx/IP HYPERchannel-to-IP Gateway

Release 2.7.6

Reference Manual

Revision Record

Revision	Description
01 (Oct 2000)	Initial manual release by Network Executive Software
02 (Jan 2001)	Added procedures for new CDROM distribution and software keys
03 (Jan 2002)	Updated for Red Hat 7.2 distribution, miscellaneous corrections and additions.
04 (Apr 2002)	Miscellaneous updates to correspond with version 2.3 release.
05 (Oct 2002)	Added documentation for NG_HG service
06 (Dec 2002)	Removed integration section into Software Install Guide
07 (Jun 2005)	Added Software RAID to installation
08 (Aug 2005)	Updated for NG 2.7.2 release
09 (Jan 2006)	Updated for NG 2.7.4 release
10 (Jan 2006)	Updated for NG 2.7.5 release.
11 (Feb 2006)	Updated for NG 2.7.6 release.

© 2000-2006 Network Executive Software, Inc. Reproduction is prohibited without prior permission of Network Executive Software. Printed in the USA. All rights reserved.

The U.S. Department of Commerce restricts the distribution of technical information contained in this document when exported outside the U.S. Therefore, careful attention should be given to compliance with all applicable U.S. Export Laws if any part of this document is to be exported.

Table of Contents

Revision Record	ii
Table of Contents	iii
Copyrights and Trademarks	v
Notice to the Customer	v
Introduction	1
Customization	3
Overview	3
GNA Address	3
IP Address	3
IP-GNA Relationship	4
Using a Web Browser to Configure NESiGate	4
Start Browser	4
Define the HCG FDDI Interface(s)	5
Add Routes (optional)	5
Define IP Interface	5
Reboot NESiGate	5
Web Browser Interface	7
Overview	7
Browser Considerations	7
Initial Screen	7
System & Network Configuration	7
NG-HG Components	8
Display HCG Components Configuration	8
Get Memory Trace	8
NESiGate Gateway Commands	10
HCG Display Config	10
HCG Display Info	11
HCG Display Stats	12
HCG Display Route Table	13

HCG Clear Stats	13
HCG Clear Route Table	13
HCG Start Interface.....	13
HCG Stop Interface	14
NESiGate Router Commands.....	17
Route Display Config.....	17
Route Display Info	17
Route Display Locals	17
Route Display Routes.....	17
Route Display Stats	18
Route Clear Stats.....	18
NESiGate IP Interface Commands.....	21
IP Interface Display Config.....	21
IP Interface Display Info	21
IP Interface Display Stats.....	23
IP Interface Clear Stats.....	24
Appendix A: Configuration Worksheet	27

Copyrights and Trademarks

This document contains references to the trademarks of the following corporations.

Corporation	Trademarks
International Business Machines	Netfinity®
Netscape Communications Corp.	Netscape®

Additional trademark references:

Linus Torvalds	Linux®
----------------	--------

Notice to the Customer

Comments about this manual may be submitted via mailto:pubs@netexsw.com or by visiting our website: www.netexsw.com

Always include the complete title of the document with your comments.

Introduction

The purpose of this manual is to provide an overview of the procedures used to integrate and customize the NetEx/IP components onto a NESiGate HYPERchannel-to-IP NetEx/IP gateway platform, and to provide a description of the command and web browser interfaces.

This manual is divided into four sections:

- 1) **Integration:** Integration of NESiGate software on the hardware platform is covered in the NESiGate Software Installation Guide. Refer to that guide, then return to this manual to complete the configuration of NESiGate as a HYPERchannel Gateway (HG) type device
- 2) **Customization:** this section is targeted to the end-user who is responsible for customizing the NESiGate for use as a HYPERchannel-to-IP gateway. It is assumed the NESiGate already has the appropriate level of the NESiGate-OS installed. To complete the customization, the reader must be familiar with network addressing concepts.
- 3) **Web Browser Interface:** this section is targeted to the end-user who is responsible for customizing the NESiGate for use as a HYPERchannel-to-IP gateway, and who is responsible for configuring and controlling operational aspects of the device.

Customization

Overview

The purpose of this section is to provide an overview of the procedures used to complete the customization of the NESiGate. This section is targeted to the end-user responsible for customizing a NESiGate for use as a HYPERchannel-to-IP gateway. It is assumed the NESiGate already has the appropriate level of the NESiGate-OS installed.

Prior to performing the GNA and IP customization tasks, it would be beneficial to review NESiGate GNA and network addressing concepts.

There are two important addressing elements involved in delivering NetEx/IP HYPERchannel data that is not IP-aware, and transferring it over an IP network to the correct destination:

- GNA Address
- IP Address

GNA Address


The GNA address represents a NetEx/IP network address that is associated with a given device or network node. It is specified in the NetEx/IP Network Configuration Table (NCT). It is also specified during the customization of the NESiGate HCG Interface.

IP Address

The IP address represents a NetEx/IP network node address. During the NESiGate customization task, IP host names are defined, each having a format based on its GNA address. This enables NESiGate to perform a direct mapping between GNA and IP addresses. This mapping is transparent to the communicating NetEx/IP's, as well as to all NetEx/IP applications.

IP-GNA Relationship

Assume a simple network with a NG gateway like:

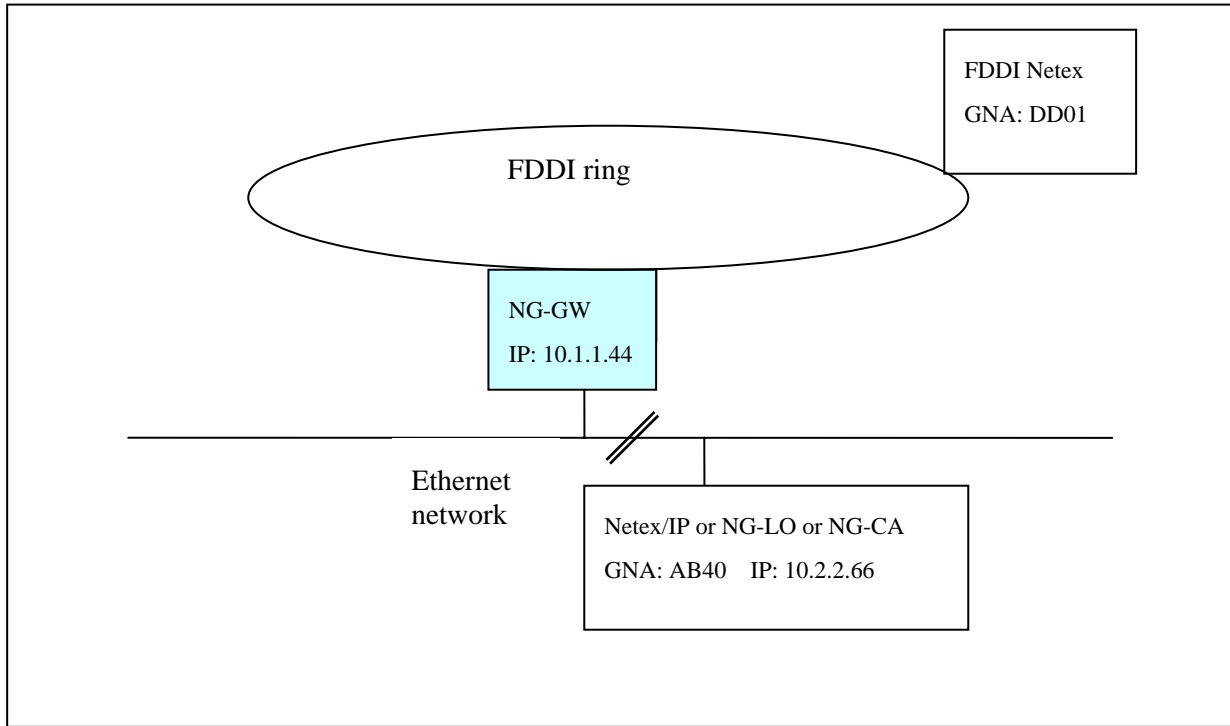

In this configuration, the NG-GW will “see” the DD01 address being advertised on the ring and accept requests for that GNA. It must also be configured to accept GNA AB40 and forward that GNA to IP address 10.2.2.66 (See ‘HCG Add Accepted’ below). Any NetEx/IP on the Ethernet network (host-based, or NESiGate) must have a defined route, /etc/hosts entry, or DNS entry that relates the FDDI NetEx GNAs to the IP address of the Gateway (here 10.1.1.44).

Using a Web Browser to Configure NESiGate

The NESiGate Web Browser Interface may be used to configure NESiGate. This procedure consists of the following steps. Refer to the “Web Browser Interface” section on page 7 for a complete description of the commands used in this section.

Start Browser

The NESiGate Web Browser Interface may be used to configure NESiGate. Before configuring the NG-HG specific items, the common System and Network configuration should be completed. See the “Installation Guide” (NG-SW) manual for details.

Define the HCG FDDI Interface(s)

Select the *Gateway* link located on the bottom toolbar. This will open the page that is titled:

NG-GW Gateway

Refer to page 10 for a description of this screen.

Add Routes (optional)

This step is only necessary if static routes are to be defined. If static routes are not defined, NESiGate will use DNS services to resolve IP addresses.

Select the *Router* link located on the bottom toolbar. This will open the page that is titled: *NESiGate Router Commands*

Using the configuration data from a completed worksheet provided in “Appendix A: Configuration Worksheet”, use the “Route Add Route” button to define the routes. Refer to page 19 for a description of this command.

Repeat this step as many times as necessary until all required routes are defined.

Define IP Interface

This step is only necessary if default IP parameters are to be modified (usually not necessary).

Select the *IPIF* link located on the bottom toolbar. This will open the page that is titled: *NESiGate IP Commands*

Use the “IP Interface Define Interface” button to define the IP interface parameters. Refer to page 25 for a description of this command.

Reboot NESiGate

After the configuration changes have been made, the NESiGate unit must be rebooted to make the changes effective:

- Browse to the “System Configuration” page of the NESiGate
- In the “Command” menu, select “REBOOT”
- Click the “Command” button

Web Browser Interface

Overview

The Apache web server is used on NESiGate to provide a web-enabled configuration facility. Connecting NESiGate to an intranet infrastructure enables usage of a web browser to configure the Channel, Router, IP, and Control components. The browser can also be used to display configuration information, and control various operational aspects of the components.

Browser Considerations

The browser can be hosted on any system, as long as that system has connectivity to NESiGate. However, the browser must be configured to refresh pages on each page reference.

Initial Screen

When the browser first connects to NESiGate, a password entry window will be displayed. Enter the ngadmin userid you have been assigned and its password to gain access to the NESiGate. Default userids and passwords are described in the common NESiGate Installation Manual.

The initial screen displayed when the password has been accepted includes a “Welcome” screen with general information on the right and a list of the available command frames and HELP links on the left.

System & Network Configuration

The links near the bottom of this page will bring you to the area for configuring and displaying common system and network information. Refer to the NESiGate Installation Manual for a description of these commands.

NG-HG Components

This screen is used to define, process, or view component configuration data.



From this drop-down menu, the following commands can be initiated -

- Display HCG Components Configuration
- Get Memory Trace

After selecting the desired command, click the **GO** button to process. Results of the command will be returned to the browser for display.

Display HCG Components Configuration

This command shows the list of components selected to be loaded and the locations of the component's configuration files, as illustrated in Figure 1.

```
NESIGate Display HCG Components Configuration

DO_NESIGATE_HCG_LOAD=yes
DO_CONTROL=yes
CONTROL_CONFIG=/etc/nesigate/conf/control-hcg.cfg
DO_ROUTE_DNS=yes
ROUTEDNS_CONFIG=/etc/nesigate/conf/routedns.cfg
```

Figure 1. Output from 'Display HCG Components Configuration'

Get Memory Trace

This command dumps the current event trace buffer to the browser screen. This may be needed if requested by NetEx/IP support for debugging purposes.

Set HCG Memory Trace

This button sets logging of events to the memory trace by component:

Router:	sets event logging for the Router component.
HCG:	sets event logging for the HCG component.
IP Interface:	sets event logging for the IP Interface component.

Normally, all are selected.

Display Log File

Tail Log File

Displays the contents of each component's event log file. 'Tail' shows just the last few dozen lines:

HCG-Control:	view the content of the Control log file.
Router DNS:	view the content of the Router log file.
Console Messages:	view the content of the Console log file.

Modify HCG Components Configuration

This button marks various components to be automatically loaded at start-up time:

Load Modules
Start Control
Start Router DNS

NESiGate Gateway Commands

This screen is used to define, control, or view HCG FDDI interface data.

Command drop-down menu	GO
-------------------------------	-----------

From this drop-down menu, the following commands can be initiated -

- HCG Display Config
- HCG Display Info
- HCG Display Stats
- HCG Display Route Table
- HCG Clear Stats
- HCG Clear Route Table
- HCG Start Interface
- HCG Stop Interface

After selecting the desired command and entering the necessary parameters, click the **GO** button to process. Results of the command will be returned to the browser for display.

HCG Display Config

This command displays the current hcg interface configuration. Prior to selecting this button, provide the following data on the selection screen:

ID (optional) specify the name of the interface to display.

If ID is not specified, all defined hcg interfaces are displayed.

netDevName	minor	l_index	opt	rtadv	reasm	myGna	nucGna
fddi0	1	1	0	30	2	0101a600	0101a6ff
dom_mask	00000000	00000000	00000000	00000000	00000000	00000000	00000000
net_mask	00000000	00000000	00000000	00000000	00000000	00000000	00000000
unitmask	00000000	00000000	00000000	00000000	00000000	00000000	00000000
	00000000	42194200	00000000	00000000	00000000		
units	a1 a6 ab ac af b1 b6						

where:

netDevName	assigned name of the FDDI network interface
minor	the streams minor number associated with this interface
l_index	the streams link index associated with the router side of this interface
opt	interface options (currently not used)
rtadv	time in seconds between route advertisement broadcasts

reasm maximum time in seconds to wait for fragments of a fragmented block
myGNA Global Network Address assigned to this device
nucGNA Global Network Address for the pseudo-nucleus of this device

dom_mask 256 bit mask of domains to forward out this interface
net_mask 256 bit mask of networks to forward out this interface
unitmask 256 bit mask of units to forward out this interface
units list of units from unitmask

HCG Display Info

This command displays detailed hcg interface information. Prior to selecting this button, provide the following data on the selection screen:

ID (optional) specify the name of the hcg interface to display. If ID is not specified, all defined hcg interfaces are displayed.

id	txpacks	txfrags	rxpacks	rxfrags		
fddi0	10266608	134170883	7758919	48783658		
delayTx	delayRx	notifSnt	notifRcv	noAccept	dupAccep	
0	0	25365	229270	0	0	
skipNoBf	badFmt	dropFlow	dropNotS	reasmTmo	dupUnit	
0	0	0	0	1	0	
dupAcc1	dupAcc2	mac1		mac2		
0	0	0000000000000000		0000000000000000		

HCG Display Stats

This command displays statistics for a particular hcg interface. Prior to selecting this button, provide the following data on the selection screen:

ID - specify the name of the hcg interface to display.

id	txpacks	txfrags	rxpacks	rxfrags		
fddi0	10266608	134170883	7758919	48783658		
delayTx	delayRx	notifSnt	notifRcv	noAccept	dupAccep	
0	0	25365	229270	0	0	
skipNoBf	badFmt	dropFlow	dropNotS	reasmtmo	dupUnit	
0	0	0	0	1	0	
dupAcc1	dupAcc2	mac1	mac2			
0	0	0000000000000000	0000000000000000			

where:

- id** assigned name of the fddi network interface
- txpacks** transmitted packet count
- txfrags** transmitted packet fragments count
- rxpacks** received packet count
- rxfrags** received packet fragments count
- delayTx** number of delayed (network backed up) transmit packets
- delayRx** number of delayed received packets (always 0 currently)
- notifSnt** notify messages sent
- notifRcv** notify messages received
- noAccept** number of packets tossed because there is no acceptor mac address to send to
- dupAccep** number of duplicate acceptors received
- skipNoBf** number of received packets tossed because of no available stream buffers
- badFmt** number of invalid notification messages received
- dropFlow** number of received packets tossed because of router flow control
- dropNotS** number of received packets tossed because the stream interface is not started
- reasmtmo** number of packet reassembly timeouts
- dupUnit** number of duplicate unit number acceptors received
- dupAcc1** one of the acceptor GNAs advertising the duplicated unit number
- dupAcc2** the other acceptor GNA advertising the duplicated unit number
- mac1** mac address of one unit advertising duplicate unit number
- mac2** mac address of the other unit advertising duplicate unit number

HCG Display Route Table

This command shows all learned route entries. Prior to selecting this button, provide the following data on the selection screen:

ID - specify the name of the hcg interface to display.

```
Domains
-----

Networks
-----

Units
-----
20 0000a9022b38 010120f0
21 0000a9022b38 010120f0
22 0000a9022b38 010120f0
23 0000a9022b38 010120f0
24 0000a9022b38 010120f0
25 0000a9022b38 010120f0
26 0000a9022b38 010120f0
28 0000a9022b38 010120f0
b3 0000a9022065 0101b300
b4 0000a9022065 0101b300
b5 0000a90220f8 0101b500
ca 0000a9020b4e 0101ca00
cb 0000a9020b4e 0101ca00
```

Domains & Networks: not currently used

Units: the FDDI network unit numbers acceptor MAC addresses and nucleus GNAs

HCG Clear Stats

This command clears all or selected hcg interface statistics. Prior to selecting this button, provide the following data on the selection screen:

ID - specify the name of the hcg interface to clear.

HCG Clear Route Table

This command clears all learned route table entries.

HCG Start Interface

This command starts a defined hcg interface. Prior to selecting this button, provide the following data on the selection screen:

ID - specify the name of the hcg interface to start.

HCG Stop Interface

This command stops a defined hcg interface. Prior to selecting this button, provide the following data on the selection screen:

ID - specify the name of the hcg interface to stop.

HCG Define Interface

This button defines an hcg interface, which consists of a FDDI interface and associated parameters and accepted GNAs. Prior to selecting this button, provide the following data on the selection screen:

- NETDEVNAME - name of the hcg interface. This name must match the device name of the FDDI NIC
- myGNA - GNA address of the gateway itself. This represents an internal dummy address that specifies a GNA address in the form *uuss*.
- RouteAdvTime - Time in seconds between route advertisement broadcasts.
- ReAsnTimeout - Maximum time in seconds to wait for fragments of a fragmented block.
- Chg running (temp) - select this box to make a temporary change. The change will only remain in effect until the unit is restarted.
- Chg file (perm) - select this box to make a permanent change.

Reset

This button resets the values specified in the display windows to the default values. It does not result in any command submission.

HCG Undefine Interface

This button deletes a previously defined hcg interface. Prior to selecting this button, provide the following data on the selection screen:

- NETDEVNAME - name of the hcg interface. This specifies the name used when the hcg interface was defined.
- Chg running (temp) - select this box to make a temporary change. The change will only remain in effect until the unit is restarted.

Chg file (perm) - select this box to make a permanent change

HCG Add Accepted

This button adds GNA addresses that will be accepted by the gateway HYPERchannel interface and directed to the IP network. Prior to selecting this button, provide the following data on the selection screen:

- ID - specifies the name of the hcg interface that should accept the starting (and ending) GNA addresses, as specified in the following boxes
- Dom - check this box if the start (and end) address indicates a GNA domain address
- Net - check this box if the start (and end) address indicates a GNA network address
- Unit - check this box if the start (and end) address indicates a GNA unit address
- Start - specifies the starting GNA address, as indicated by the Dom/Net/Unit box
- End - specifies the ending GNA address, as indicated by the Dom/Net/Unit box
- Chg running (temp) - select this box to make a temporary change. The change will only remain in effect until the unit is restarted.
- Chg file (perm) - select this box to make a permanent change.

Reset

This button resets the values specified in the display windows to the default values. It does not result in any command submission.

HCG Remove Accepted

This button removes GNA addresses that were previously accepted by the gateway HYPERchannel interface. Prior to selecting this button, provide the following data on the selection screen:

- ID - specifies the name of the hcg interface that should remove the starting (and ending) GNA addresses, as specified by the following boxes
- Dom - check this box if the start (and end) address indicates a GNA domain address

- Net - check this box if the start (and end) address indicates a GNA network address
- Unit - check this box if the start (and end) address indicates a GNA unit address
- Start - specifies the starting GNA address, as indicated by the Dom/Net/Unit box
- End - specifies the ending GNA address, as indicated by the Dom/Net/Unit box
- Chg running (temp) - select this box to make a temporary change. The change will only remain in effect until the unit is restarted.
- Chg file (perm) - select this box to make a permanent change.

HCG Set Debug

This button sets the debug trace level for all interfaces, or for a specific hcg interface. Prior to selecting this button, provide the following data on the selection screen:

- ID - specify the name of the hcg interface for which to enable debug, or, select the "global" checkbox for all interfaces.

Debug Level enter one of the following values:

- 0 - no console tracing
- 1 - trace only H-level msgs
- 2 - trace H,M-level msgs
- 3 - trace H,M,L-level msgs
- 4 - trace H,M,L,D-level msgs
- 5 - trace streams msgs
- 6 - trace msg data
- 7 - trace all data

Help Debug

This button displays help information for the 'HCG Set Debug' command in a separate window.

NESiGate Router Commands

This screen is used to define, process, or view router configuration data.



The diagram shows two buttons. On the left is a rounded rectangular button with the text "Command drop-down menu". To its right is a square button with the text "GO".

From this drop-down menu, the following commands can be initiated -

- Route Display Config
- Route Display Info
- Route Display Locals
- Route Display Routes
- Route Display Stats
- Route Clear Stats

After selecting the desired command, click the **GO** button to process. Results of the command will be returned to the browser for display.

Route Display Config

This command displays the current configured routes.

Route Display Info

This command displays information for the router control stream or a particular stream identified by Link Index. The Link Index can be obtained by first displaying the channel configuration with the "HCG Display Config" command.

Route Display Locals

This command displays all current defined local routes (device to GNA mappings).

Route Display Routes

This command displays all current defined external routes (IP address to GNA mappings).

Route Display Stats

This command displays statistics for the router control stream or for a particular stream identified by the Link Index. The Link Index can be obtained by first displaying the channel configuration with the "HCG Display Config" command.

Sample output:

id	txmsgs	txbytes	rxmsgs	rxbytes	outDrop	inDrop
2	0	0	0	0	0	0

where -

id : control or *L_INDEX*
txmsgs : the number of messages sent from the router to the lower stream
txbytes : the number of bytes sent from the router to the lower stream
rxmsgs : the number of messages received from a lower stream
rxbytes : the number of bytes received from a lower stream
outDrop : the number of dropped messages from an upper stream
inDrop : the number of dropped messages from a lower stream

Route Clear Stats

This command clears statistics for the router control stream or for a particular stream identified by the Link Index. The Link Index can be obtained by first displaying the channel configuration with the "HCG Display Config" command.

control clear statistics for the Control stream

index clear statistics for the stream linked under the Router at *L_INDEX*. *L_INDEX* can be obtained by first displaying the channel configuration.

Route Set Debug

This button sets the debug trace level globally, for the control stream or for a particular stream identified by the Link Index. The Link Index can be obtained by first displaying the channel configuration with the "HCG Display Config" command.

VALUE:

0 : no console tracing
1 : console trace only H level messages
2 : console trace level H and M messages
3 : console trace level H, M, and L messages
4 : console trace level H, M, L, and D messages
5 : console trace the actual streams messages

6 : console trace the streams message data
7 : console trace all the data

global set Router debug level globally

control set Router debug level for the Router control stream.

L_INDEX set Router debug level for the stream linked under the Router at *L_INDEX*. *L_INDEX* can be obtained by first displaying the channel configuration

Help Debug

This button displays help information for the "router debug" command in a separate window.

Route Add Route

This button defines a mapping of a GNA route to an IP address. If the GNA already has a route defined, it will be changed.

Prior to selecting this button, provide the following data on the selection screen:

StartGNA	specify the GNA address of the destination host.
IP Addr	specify the IP address to which the StartGNA value should be routed.
Num	specify the number of consecutive StartGNA addresses to route.
Chg running (temp)	select this box to make a temporary change. The change will only remain in effect until the unit is restarted.
Chg file (perm)	select this box to make a permanent change.

Route Delete Route

This button deletes a currently defined route. Prior to selecting this button, provide the following data on the selection screen:

StartGNA	specify the GNA address of the destination host to delete.
Chg running (temp)	select this box to make a temporary change. The change will only remain in effect until the unit is restarted.
Chg file (perm)	select this box to make a permanent change.

Route Delete All Routes

This button deletes all defined routes. Prior to selecting this button, provide the following data on the selection screen:

- | | |
|--------------------|--|
| Non-Configured | select this box to delete only the routes that were found by DNS look-ups. |
| Configured | select this box to delete only the routes that were defined with Route Add commands. |
| Chg running (temp) | select this box to make a temporary change. The change will only remain in effect until the unit is restarted. |
| Chg file (perm) | select this box to make a permanent change. |

NESiGate IP Interface Commands

This screen is used to define, control, or view IP configuration data. They are normally not used.

Command drop-down menu	GO
-------------------------------	-----------

From this drop-down menu, the following commands can be initiated -

- IP Interface Display Config
- IP Interface Display Info
- IP Interface Display Stats
- IP Interface Clear Stats

After selecting the desired command, click the **GO** button to process. Results of the command will be returned to the browser for display.

IP Interface Display Config

This command displays the current IP configuration.

type	prot	minor	l_index	ref	optfl	lport	mxrcvbyt	mxsndbyt
MSG	UDP	2	4	c2a4ba20	0	6950	512000	512000

where -

- type : currently only MSG is supported
- prot : currently only UDP is supported
- minor : the streams minor number associated with this interface
- l_index : the streams link index associated with the router side of this IP interface
- ref : reference # for this interface (address of connection control block)
- opt fl : option flags 0x80 : checksum off
- lport : local port number associated with this interface
- mxrcvbyt : maximum socket receive byte count
- mxsndbyt : maximum socket send byte count

IP Interface Display Info

This command displays detailed information for a particular IP interface stream ID. The ID can be obtained by first displaying the IP configuration with the "IP Interface Display Config" command.

```

      id      ref      state  db prot fl backlog rdCred padLen
-----
msg:2 cf715020      0 0  UDP 80      0      -1      0

waitWrQ waitConQ stream      sk      sock      unsolId saveUId svFl
-----
      0      0 cdbdc800 cf054b80 cda4d08c      0      0      0

abrtR rPort  rAddr  lPort  lAddr  mxRcvByt mxSndByt  con
-----
      0      0      0 6950      0 512000 512000 cf715020

```

where -

```

id      : temporary id for display only – minor number
ref     : reference # for this connection (address of connection control block)
state   : current state of this connection (currently unused)
db      : stream debug level
prot    : protocol (currently only UDP supported)
fl      : stream flags  0x80 : read queue is being serviced
                    0x40: write queue is being serviced
                    0x20: control stream

backlog : currently unused
rdCred:  : currently unused (should always be -1)
padLen  : currently unused
waitWrQ : currently unused
waitConQ : currently unused
stream  : the address of the stream control block
sk      : address of IP sock structure
sock    : address of IP socket structure
unsolId : unsolicited id (currently unused)
saveUId : temporary save area
svFl    : temporary save area
abrtR   : abort reason code (currently unused)
rPort   : remote port number if connected (currently unused)
rAddr   : remote IP address if connected (currently unused)
lPort   : local port number
lAddr   : local IP address (0 if any address)
mxRcvByt : maximum socket receive byte count
mxSndByt : maximum socket send byte count
con     : address of connection control block

```

```

      id      device  minor  db sdb gdb gsdb mt  fl  retId  hcCon
-----
      msg      4801      1  0 OFF  2  OFF  ON  0      0 cf715020

openFl  streamFl  readQ   writeQ   stream  numCons
-----
      2        2 cd80e154 cd80e190 cdbdc800      1

                                cons
-----
cf715020

```

where -

id : temporary id for display only – minor number
 device : the stream device number associated with this interface
 minor : the streams minor number associated with this interface
 db : connection debug level
 sdb : socket debug level
 gdb : global debug level
 gsdb : global socket debug level
 mt : memory trace on or off
 fl : connection flags 0x80 : hc connection
 0x08 : no checksum socket option
 0x04 : debug socket option
 retId : current retry timeout id
 hcCon : address of special hc connection control block
 openFl : device open flags
 streamFl : device stream flags
 readQ : the address of the stream read queue
 writeQ : the address of the stream write queue
 stream : address of stream control block
 numCons : number of connections using this interface
 cons : list of connection control block addresses

IP Interface Display Stats

This command displays statistics for the stream or a connection.

Example 1: no connection specified

```

      id      txmsgs   txbytes   rxmsgs   rxbytes
-----
      msg      0         0         0         0

txdelay  rxdelay  outDrop  inDrop
-----
      0         0         0         0

```

Example 2: specific connection (1)

```
igs msg 1:
  id          txmsgs  txbytes  rxmsgs  rxbytes
-----
  msg:1      0        0        0        0

txdelay  rxdelay  outDrop  inDrop
-----
  0        0        0        0
```

where -

id : temporary id for display only – minor number:connection reference number
txmsgs : # messages sent to IP
txbytes : # bytes sent to IP
rxmsgs : # messages received from IP
rxbytes : # bytes received from IP
txdelay : # stream delayed messages destined for IP
rxdelay : # stream delayed messages coming from IP
outDrop : # dropped messages destined for IP
inDrop : # dropped messages coming from IP

IP Interface Clear Stats

This command clears the statistics for the stream or a connection.

HELP Debug

This button displays help information for the "set debug" command in a separate window.

IP Interface Set Debug

This button sets the debug trace level globally or for a particular connection. The ID can be obtained by first displaying the IP configuration with the "IP Interface Display Config" command.

IP Interface Define Interface

This button defines various IP interface parameters.

Prior to selecting this button, provide the following data on the selection screen:

- port number - the local port number (normally set to 6950).
- checksum - select this box to enable the checksum of IP packets.
- Max Receive - the maximum receive buffer size (normally set to 512000).
- Max Send - the maximum send buffer size (normally set to 512000).
- Chg running (temp) - select this box to make a temporary change. The change will only remain in effect until the unit is restarted.
- Chg file (perm) - select this box to make a permanent change

Appendix A: Configuration Worksheet

This worksheet can be used to record the necessary NESiGate configuration information.

HOST & IP Information <i>(Used for Network Configuration)</i>	<i>Example</i>	Site Configuration
Host name	<i>netfin3</i>	
IP address	<i>10.1.2.27</i>	
Domain name	<i>netexsw.com</i>	
Network mask	<i>255.255.255.0</i>	
Default gateway	<i>10.1.2.50</i>	
IP address of name server	<i>10.1.3.1</i>	
NESiGate Accepted GNAs Information	<i>Example</i>	Site Configuration
HCG Interface	<i>fddi0</i>	
GNA accepted by gateway	<i>2000</i>	
(repeat for all GNAs)		
NESiGate Router Information <i>(Used for NESiGate Static Routes definitions) (Note 1)</i>	<i>Example</i>	Site Configuration
StartGNA (remote GNA address)	<i>DC00</i>	
IP Addr	<i>10.1.2.15</i>	
Num (number of consecutive addresses)	<i>4</i>	
(repeat for all remote GNA addresses)		

NESiGate DNS Entries <i>(Used for NESiGate Dynamic Routes definitions) (Note 1)</i>	<i>Example</i>	Site Configuration
Add entries to the DNS server	<i>NTX0000A110</i> <i>10.1.2.25</i>	

Note 1: Either **Static** or **Dynamic** routing definitions must be used for each NetEx/IP GNA-to-IP mapping requirement.